

# Uniden®

## XDECT 8055 Series

---

*For more exciting new products please visit our website:*

*Australia: [www.uniden.com.au](http://www.uniden.com.au)*

*New Zealand: [www.uniden.co.nz](http://www.uniden.co.nz)*

---

# OWNER'S MANUAL

# Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- ◆ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ◆ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- ◆ Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

---

**SAVE THESE INSTRUCTIONS!**

---

## Important Notice:


- ◆ Under power failure conditions this appliance may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

## General Notices for New Zealand Model:

- ◆ The grant of a NZ Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- ◆ The maximum volume setting of this telephone exceeds the Telecom specified volume requirement. Telecom takes no responsibility for the high volume available on this telephone, customer's who believe this telephone is too loud should contact the manufacturer at the website indicated on owner's manual warranty page.
- ◆ For telephone networks other than Telecom there may be a charge incurred for local calls if the Insert 0 feature is on. Turn Insert 0 off.
- ◆ This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

# XDECT 8055 Series

## What's in the box?

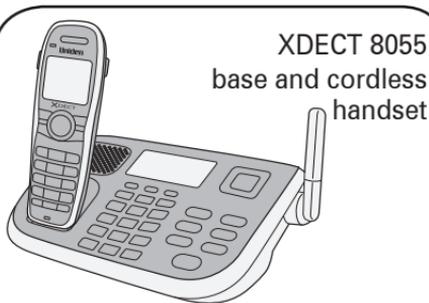

XDECT 8055  
base and cordless  
handset

### Not pictured:

- AC adaptor (AAD-041S(M))
- Telephone cord
- Rechargeable battery pack (BT-694 or BT-694s)
- Battery cover
- Belt clip
- Wall Mount Bracket
- Headset (HS915)  
(XDECT 8055 model only)

## You might also find:



XDECT 8005  
accessory  
handset &  
charger

### Not pictured:

- Repeater (R002)
- Repeater AC adaptor (AAD-041S(M))
- Charger AC adaptor (AAD-600S(M))
- Rechargeable battery pack (BT-694 or BT-694s)
- Battery cover
- Belt clip

If you purchased model number:	You should have:
XDECT 8055	None
XDECT 8055+1	1 of each*
XDECT 8055+2	2 of each*
XDECT 8055+3	3 of each*

\*Only 1 repeater is included per combo.

**If any items are missing or damaged, contact your place of purchase. Never use damaged products!**

**Need Help? Get answers at our website:  
[www.uniden.com.au](http://www.uniden.com.au) for Australian model or  
[www.uniden.co.nz](http://www.uniden.co.nz) for New Zealand model.**

# Contents

<b>Features of the XDECT 8055 Series</b> .....	<b>5</b>
<b>Installing Your Phone</b> .....	<b>5</b>
Charge the Battery.....	5
Connect the Telephone Cord /Test the connection .....	6
Installing the Belt Clip.....	7
Headset Installation (Optional).....	7
Mounting the base unit on a wall .....	8
Set Up the Repeater .....	11-14
<b>Getting to Know Your Phone</b> .....	<b>15</b>
Parts of the Base / Base keys and how they work .....	15
Parts of the Handset / Handset keys and how they work.....	17
Reading the Displays .....	19
Using the Menus .....	21
Base Setup / Handset Setup .....	22
<i>Ans. Setup / Day &amp; Time / Global Setup</i> .....	23
<i>Call Blocking / Register Accy</i> .....	23
Entering Text on Your Phone.....	24
<b>Using Your Phone</b> .....	<b>25</b>
Changing the Volume.....	26
Using the Redial List.....	26
Using Caller ID and Call Waiting / Dialing from the Caller ID list.....	27
<i>Caller ID menu options / Using Call Waiting</i> .....	28
Using the Phonebook.....	29
<i>Phonebook menu options / Phonebook entry options</i> .....	29
Chain Dialing.....	30
Finding a Lost Handset.....	30
<b>Using Special Features</b> .....	<b>31</b>
Using Do Not Disturb (DND) .....	31
Using Call Block / Blocking incoming calls (Base only) .....	31
<i>Call Blocking menu options / Call block entry options</i> .....	32
Using Voice Message Notification / Resetting the voice message indicator.....	32
<b>Using Multi-station Features</b> .....	<b>33</b>
Expanding Your Phone .....	33
Using Conference Calling.....	33
Using Privacy Mode .....	34
Using Call Transfer .....	34
Using the Intercom.....	35
<b>Using the Answering System</b> .....	<b>36</b>
Setting Up Your Answering System.....	36
<i>Ans. Setup menu options</i> .....	37
Getting Your Messages / Accessing your answering system from a handset.....	38
<i>How to operate your answering system</i> .....	39
Screening Your Calls.....	40
Using the System While You're Away from Home.....	41
<i>Programming a security code / Dialing in to your system</i> .....	41
<b>Solving Problems</b> .....	<b>42</b>
Weak or Hard To Hear Audio .....	44
Noise or Static On The Line .....	44
<i>Here are some hints for when the static is</i> .....	45
<i>Installing a line filter or DSL filter</i> .....	45
Resetting and Registering Handsets.....	46
Register Repeaters to the Base.....	47
Handling Liquid Damage.....	48
Automatic ECO (Power Save) Mode .....	48
<b>Important Information</b> .....	<b>49</b>
Terms Used In This Guide.....	49
Specifications .....	49
Battery Information.....	50
<b>INDEX</b> .....	<b>51</b>
<b>One-year Limited Warranty</b> .....	<b>54</b>

# Features of the XDECT 8055 Series

## Great features of this cordless phone include:

- ◆ Designed and Engineered in Japan
- ◆ 1.8GHz Extended DECT Technology
- ◆ Multi (12) Handset Capable<sup>1</sup>
- ◆ Multi (2) Repeater Capable (optional)
- ◆ Wall Mountable Base (and Repeater if included)
- ◆ Extra Large Backlit LCD Display with Date & Time
- ◆ Dual Keypad (Backlit on Handsets)
- ◆ Digital Duplex Speakerphones on Handset and Base
- ◆ 100 Number Phonebook (shared)
- ◆ Call Waiting<sup>2</sup>/Flash
- ◆ Call ID<sup>2</sup> Features
  - ◆ 50 Caller ID<sup>2</sup> Memories (shared)
  - ◆ Caller Name Tag<sup>2</sup>
  - ◆ Caller Personal Ring<sup>2</sup>
  - ◆ Call Block<sup>2</sup>
- ◆ 9 Ringer options (4 Rings/5 Melodies)
- ◆ 4 Level Ringer Volume
- ◆ Ringer Do Not Disturb (DND) mode
- ◆ 6 Level Earpiece Volume
- ◆ 6 Level Speaker Volume
- ◆ 5 Number Redial Memories
- ◆ Intercom/Announce Call Transfer
- ◆ Handset Conferencing (e.g. 2 handsets + Base + Outside Call)
- ◆ up to 7 Days Handset Standby Time<sup>3</sup>
- ◆ up to 10 Hours Handset Talk Time<sup>3</sup>
- ◆ Automatic ECO (power save) Mode
- ◆ Mute/Hold
- ◆ Headset Capable (for Handset)
- ◆ Beltclip
- ◆ Integrated Digital Answering Machine:
  - ◆ 12.5 minutes recording capacity
  - ◆ up to 59 messages
  - ◆ Remote access from Handset or away from home
- ◆ And More!

1 Maximum expandable with XDECT 8005 accessory handsets. Note: Expansion capacity is limited to six (6) handsets total if an XDECT 8015WP or XDECT 8005WP (waterproof) handset is registered.


2 Caller ID, Call Waiting features work only if you subscribe to the service provided by your local telephone company. There is usually a fee for this service. Name Tag, Personal Ring and Call Block features require incoming Caller ID data.

3 Based on normal use with full battery charge.


# INSTALLING YOUR PHONE

## Charge the Battery

- 1) Unpack all handsets, battery packs, and battery covers. If any battery cover is already on the handset, press in on the notch and slide the cover down and off.

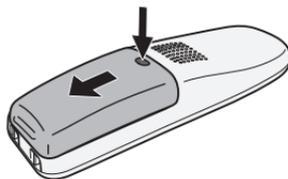


- 2) Line up the red and black wires on the battery pack with the label inside the handset.

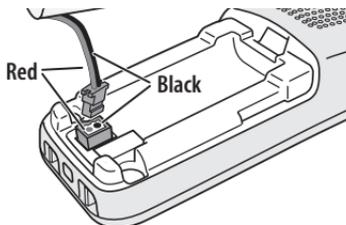


- 3) Push the connector in until it clicks into place; tug gently on the wires to make sure the battery pack is securely connected.


- 4) Place the cover over the battery compartment and slide it up into place.

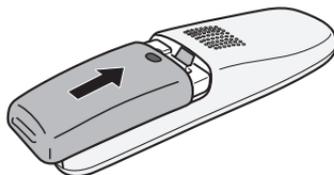

- 5) Connect the base AC adapter to the **DC IN 9V** jack on the rear of the base. Route the cord through the molded wiring channel as shown.

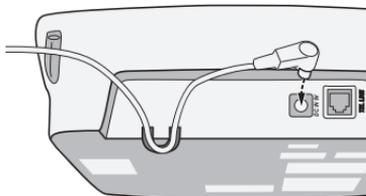


- 6) If you have accessory handsets, connect a charger AC adapter to each charger's **DC IN 9V** jack and set the plug into the notch as shown. (These adapters might already be connected.)

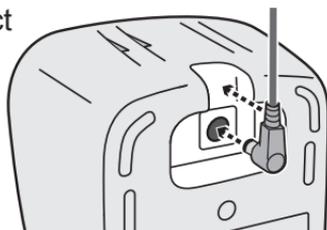

- 7) Plug the other end of each adapter into a standard 240V AC power outlet.

- 8) Place a handset in the base and any accessory handset(s) in the charger(s) with the display(s) facing forward. The **CHARGE** light on the handset(s) should all turn on.


If...	Try...
the <b>CHARGE</b> light does not turn on	<ul style="list-style-type: none"><li>- reseating the handset.</li><li>- checking the AC adapter connection.</li><li>- seeing if the outlet is controlled by a wall switch.</li></ul>

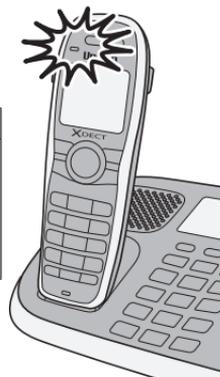

**Charge all handsets completely (about 15 hours) before using them.**

## Connect the Telephone Cord

Use the telephone cord to connect the **TEL LINE** jack to a standard telephone wall jack.

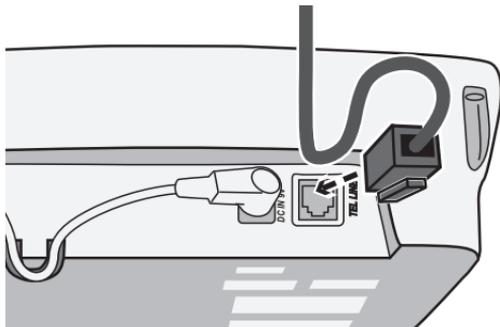

## Test the connection

- 1) Pick up the handset from the cradle and press **TALK /FLASH**. You should hear a dial tone, and the display should say *Talk*.

If...	Try...
you don't hear a dial tone or the display says <i>Check Tel Line</i>	checking the connection between the base and the phone jack.

2) Make a quick test call. (Press **END** to hang up.)

If...	Try...
there's a lot of noise or static	see page 39-40 for tips on avoiding interference.

3) Test any accessory handsets the same way. If you can't get a dial tone or the handset display says *Unavailable*, try moving the handset closer to the base or resetting it (see page 41). Charge all handsets completely (about 15 hours) before using them.

## Installing the Belt Clip

Line up the holes on each side of the handset. **To attach the belt clip**, insert into the holes on each side of the handset. Press down until it clicks. **To remove the belt clip**, pull either side of the belt clip to release the tabs from the holes.

## Headset Installation


Your phone may be used with the Uniden HS915 headset (included with XDECT 8055 model). **To use this feature**, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. Additional headsets are available through Uniden authorized retailers.

## Mounting the base unit on a wall


This phone can be mounted on any standard telephone wall plate.

- 1 Connect the AC adapter and the telephone cords as shown on pages 6 and 7. Remember to route the AC adapter cord through the channel.


- 2 Line up the four tabs on the wall mount bracket (two at the top and two at the bottom) with the four notches on the bottom of the base. Slide the bracket into place. It may help to pinch the two front prongs together to slide easier into the bottom tabs.

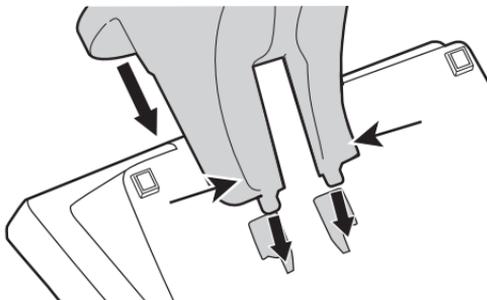

- 3 Plug the telephone cord into the wall jack.

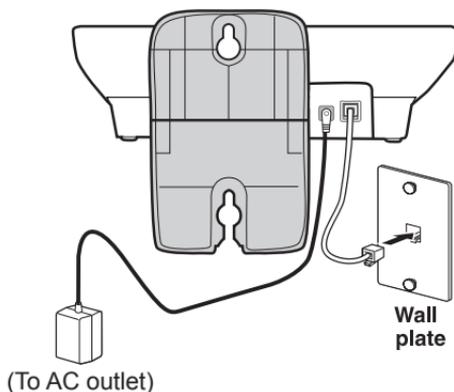


- ④ Place the mounting slots over the pins on the wall plate.

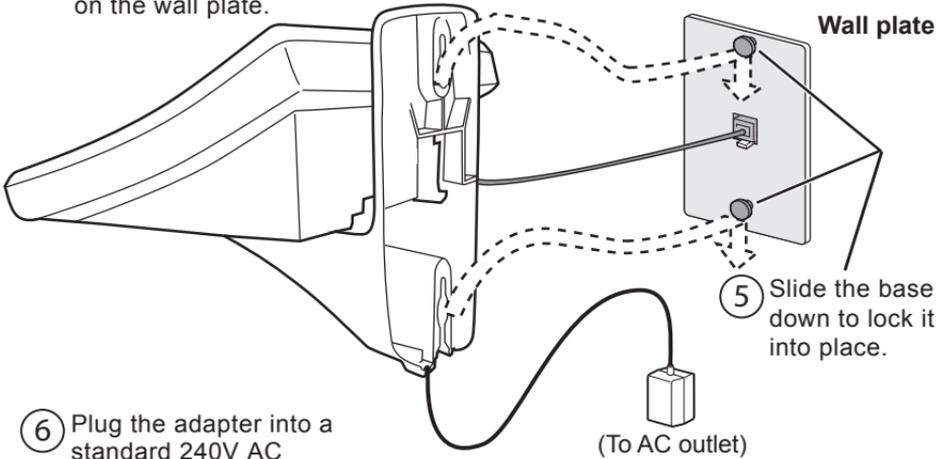

- ⑥ Plug the adapter into a standard 240V AC power outlet.

#### Removing the wall-mount bracket

Pinch the two prongs locked into the bottom tabs together and push the bracket up.

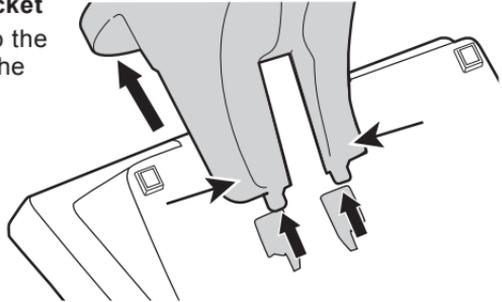

Note: Mounting the phone directly on the wall


- ◆ Be sure the wall is capable of supporting the weight of the phone, and use the proper type of anchoring device for the wall material.
- ◆ Insert two #10 screws (minimum length of 35mm, not supplied) into the wall, 100mm apart.
- ◆ Leave the screw heads 3mm away from the wall to allow room for mounting the phone.
- ◆ Align the mounting slots over the screws and slide the base down into place as shown above.

## Set Up the Repeater


- ◆ The repeater is not a telephone; it must be registered to a phone base before using.
- ◆ Any repeater that came packaged with a base are already registered to that base for you.
- ◆ For instructions on registering repeaters to the base, see page 47.

## How it Works

The repeater extends the range of your base in all directions, including up and down. Cordless handsets automatically connect to the repeater or the base, depending on which signal is stronger. You can roam anywhere within range of the base or the repeater(s) and make and receive calls as usual from your handsets.

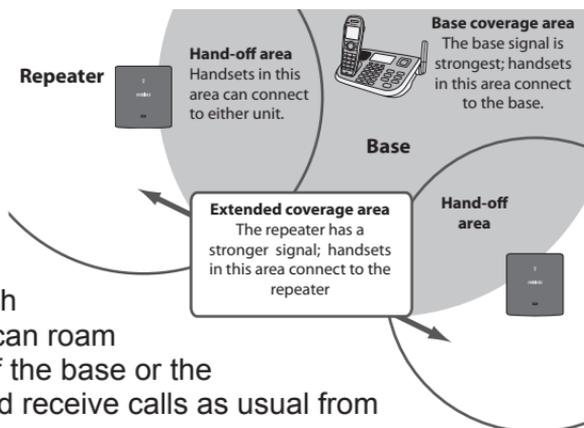

- ◆ Handsets operate exactly the same no matter which unit they connect to.
- ◆ Usually, you can't tell when a handset switches between the base and the repeater in the middle of a call.
- ◆ Your base supports a total of 6 repeaters, including any that were supplied with your phone.
- ◆ Repeaters can be up to 3 chain-links (maximum) from the base.

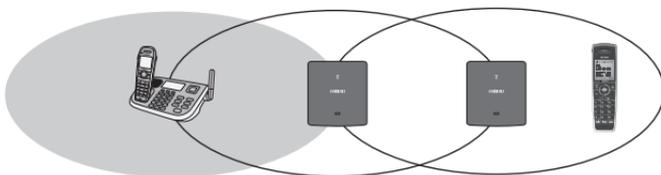


## Connect the Repeater Power Cord

Use the included adapter to connect the repeater to a regular indoor (240 V AC) power outlet.

## Placing the Repeater


Here are a few tips for placing your repeater so that you get the clearest signal and the maximum range:

- ◆ Place the repeater just inside the base's coverage area, that is, as far from the base as possible where you still have good reception.
- ◆ Put the repeater **at least 10 m** away from the base or any other repeater.
- ◆ If you place the repeater on a flat surface, make sure the power cord doesn't pull on the unit and that people walking by won't knock it off the surface.
- ◆ If possible, mount the repeater on the wall.

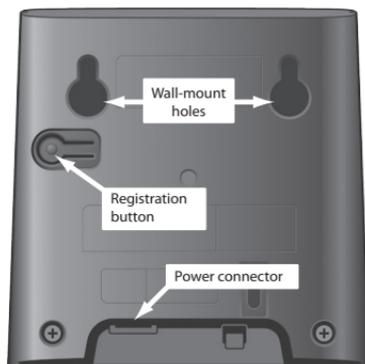

## Finding the Base's Coverage Area

1. Stand near the base and make a call on a cordless handset that is registered to that base.
- 2) Continue the call and carry the handset away from the base. Make sure you go at least 10 meters.
- 3) Make a note where you start to hear noise on your call (the signal is getting weaker). You can use the signal strength icon on the handset display to find the best location: make a note where the icon indicates the signal is getting weaker.

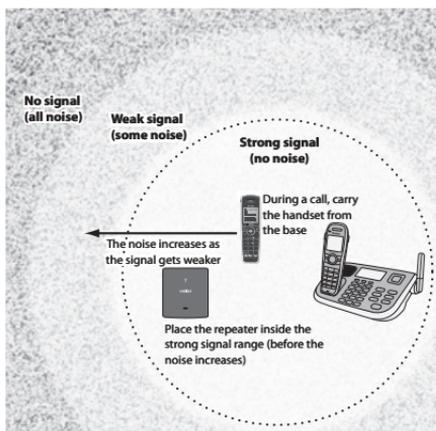

- 1) Place the repeater anywhere inside the range where the handset had a clear connection with no noise and the icon showed a strong signal.

### **Testing the Location**

1. Place the repeater in its final position and connect the AC adapter. The **LINK** light will flash for a few seconds, then stay on.

<b>If...</b>	<b>Try...</b>
the <b>LINK</b> light doesn't turn on	<ul style="list-style-type: none"><li>- checking the repeater's AC adapter</li><li>- connecting the adapter to a different outlet.</li></ul>
the <b>LINK</b> light continues flashing	<ul style="list-style-type: none"><li>- making sure the repeater is not near electronic devices that can cause interference.</li><li>- making sure there are no thick walls or large metal objects between the repeater and the base; these can block the signal.</li><li>- making sure there is no other base or repeater within 10 m of this location.</li></ul>

- 2) Move further away from the base and make a test call on a cordless handset.

<b>If...</b>	<b>Try...</b>
the call won't connect	<ul style="list-style-type: none"><li>- re-registering the repeater.</li></ul>
there is a lot of noise on the call	<ul style="list-style-type: none"><li>- moving the repeater closer to the base.</li></ul>

### ***Place the Repeater on the Wall***

You can mount the repeater directly to a wall using the horizontally aligned mounting slots at the back of the repeater unit. Before doing this consider the following:

- ◆ Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- ◆ Mount the repeater within distance of a working 240V AC power outlet.

**The Repeater unit is NOT waterproof. If mounted onto an outside wall place under an eave or roof overhang where it is protected from direct weather conditions, DO NOT place in direct sunlight.**

- 1) Insert two #10 screws into the wall, 57 mm apart. Leave the heads of the screws about 6 mm away from the wall. (For best results, use a level to ensure the screws are even.)

**Remember to use appropriate anchors for the wall material.**


- 2) Keeping the AC adapter cord out of the way, place the repeater over the screw heads and slide it down into place.

To remove the unit from the wall, just slide it up and lift it off the screw heads.

# Getting To Know Your Phone

## Parts of the Base

If the key name is spelled out on the key itself, it's not labeled in the drawing below.

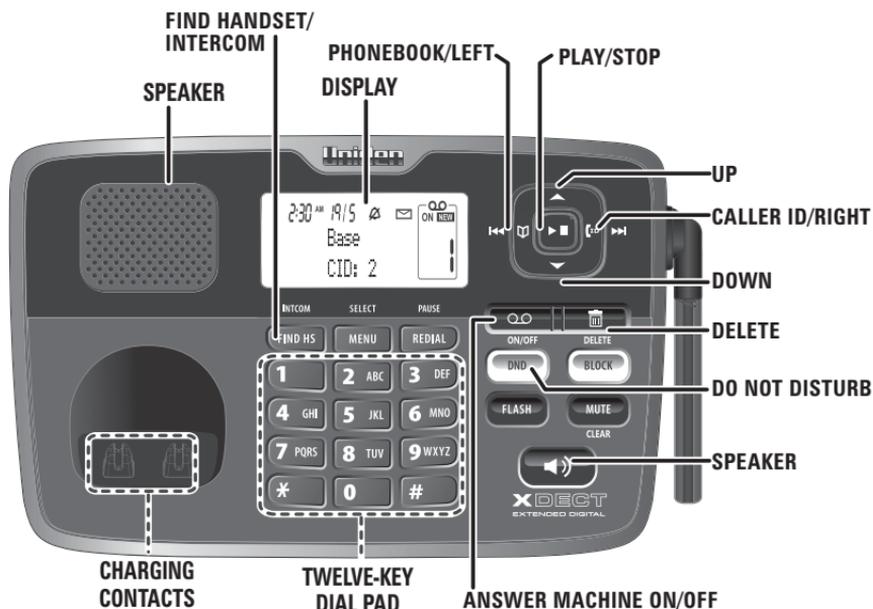

## Base keys and how they work

Key name (and icon)	What it does
<b>MUTE/CLEAR</b>	<ul style="list-style-type: none"> <li>- While this station is ringing: mute the ringer for this call only.</li> <li>- During a call: mute the microphone.</li> <li>- While entering text: delete one character, or press &amp; hold to delete all the characters.</li> </ul>
<b>MENU/SELECT</b>	<ul style="list-style-type: none"> <li>- In standby: open the menu.</li> <li>- In the menu or any list: select the highlighted item.</li> </ul>
<b>REDIAL/PAUSE</b>	<ul style="list-style-type: none"> <li>- In standby: open the redial list.</li> <li>- While entering a phone number: insert a 2-second pause.</li> </ul>

Key name (and icon)	What it does
<b>PLAY/STOP</b> (▶■)	<ul style="list-style-type: none"> <li>- In standby: start playing messages.</li> <li>- While a message is playing: stop playing messages.</li> <li>- In the menu or a list: exit the menu completely.</li> </ul>
<b>PHONEBOOK/LEFT</b> (📖/◀◀)	<ul style="list-style-type: none"> <li>- In standby or during a call: open the phonebook.</li> <li>- In any menu or list: go up one level. (If you are already at the top level, the phone exits the menu and returns to the previous operation.)</li> <li>- During text entry: move the cursor to the left.</li> <li>- While playing messages: for the first 2 seconds, go to the previous message; after that: go to the start of this message.</li> </ul>
<b>CALLER ID/RIGHT</b> (📞/▶▶)	<ul style="list-style-type: none"> <li>- In standby or during a call: open the Caller ID list.</li> <li>- During text entry: move the cursor to the right.</li> <li>- While a message is playing: skip to the next message.</li> </ul>
<b>UP (▲)</b>	<ul style="list-style-type: none"> <li>- In standby: increase the ringer volume.</li> <li>- During a speakerphone call or while a message is playing: increase the speaker volume.</li> <li>- In the menu or any list: move the cursor up one line.</li> </ul>
<b>DOWN (▼)</b>	<ul style="list-style-type: none"> <li>- In standby: decrease the ringer volume.</li> <li>- During a speakerphone call or while a message is playing: decrease the speaker volume.</li> <li>- In the menu or any list: move the cursor down one line.</li> </ul>
<b>ON/OFF</b> (🔊)	<ul style="list-style-type: none"> <li>- In standby: turn the answering system on or off.</li> </ul>
<b>DELETE</b> (🗑️)	<ul style="list-style-type: none"> <li>- While a message is playing: delete this message.</li> <li>- In standby: delete all messages.</li> </ul>
<b>DO NOT DISTURB</b>	<ul style="list-style-type: none"> <li>- In standby: turn the Do Not Disturb feature on or off (see page 31).</li> </ul>
<b>FLASH</b>	<ul style="list-style-type: none"> <li>- During a call: switch to a waiting call.</li> </ul>
<b>BLOCK</b>	<ul style="list-style-type: none"> <li>- While the phone is ringing: add the incoming caller ID to the call block list (block the call).</li> </ul>
<b>FIND HANDSET/INTERCOM</b>	<ul style="list-style-type: none"> <li>- In standby: page a handset using the intercom.</li> <li>- During a call: put the call on hold &amp; start a call transfer.</li> </ul>
<b>SPEAKER</b> (🔊)	<ul style="list-style-type: none"> <li>- In standby: start a speakerphone call (get a dial tone).</li> <li>- During a speakerphone call: hang up.</li> </ul>

## Parts of the Handset

If the key name is spelled out on the key itself, it's not labeled in the drawing below.




## Handset keys and how they work

Key name (and icon)	What it does
<b>UP (▲)</b>	<ul style="list-style-type: none"> <li>- In standby: increase the ringer volume.</li> <li>- During a call: increase the call volume.</li> <li>- In the menu or any list: move the cursor up one line.</li> </ul>
<b>CALLER ID/RIGHT (☎)</b>	<ul style="list-style-type: none"> <li>- In standby or during a call: open the Caller ID list.</li> <li>- During text entry: move the cursor to the right.</li> </ul>
<b>DOWN (▼)</b>	<ul style="list-style-type: none"> <li>- In standby: decrease the ringer volume.</li> <li>- During a call: decrease the call volume.</li> <li>- In the menu or any list: move the cursor down one line.</li> </ul>


Key name (and icon)	What it does
<b>MENU/SELECT</b>	<ul style="list-style-type: none"> <li>- In standby: open the menu.</li> <li>- In the menu or any list: select the highlighted item.</li> </ul>
<b>END</b>	<ul style="list-style-type: none"> <li>- During a call: hang up.</li> <li>- In the menu or any list: exit &amp; go to standby.</li> </ul>
<b>INTERCOM/ CLEAR</b>	<ul style="list-style-type: none"> <li>- In standby: page another station using the intercom.</li> <li>- During a call: put the call on hold &amp; start a call transfer.</li> <li>- While entering text: delete one character, or press &amp; hold to delete all the characters.</li> </ul>
<b>PHONEBOOK/ LEFT</b> 	<ul style="list-style-type: none"> <li>- In standby or during a call: open the phonebook.</li> <li>- In the menu: go back to the previous screen.</li> <li>- During text entry: move the cursor to the left.</li> </ul>
<b>#/DND</b>	<ul style="list-style-type: none"> <li>- Do Not Disturb (DND) - Opens a menu to disable the ringer on all handsets for a set time period.</li> </ul>
<b>*/ LOCK</b>	<ul style="list-style-type: none"> <li>- In standby: press and hold to lock or unlock the keypad.</li> </ul>
<b>TALK /FLASH</b>	<ul style="list-style-type: none"> <li>- In standby: start a telephone call (get a dial tone).</li> <li>- During a call: switch to a waiting call.</li> </ul>
<b>SPEAKER</b> 	<ul style="list-style-type: none"> <li>- Switch a normal call to the speakerphone (&amp; back).</li> </ul>
<b>REDIAL/PAUSE</b>	<ul style="list-style-type: none"> <li>- In standby: open the redial list.</li> <li>- While entering a phone number: insert a 2-second pause.</li> </ul>
<b>MESSAGES</b>  /MUTE	<ul style="list-style-type: none"> <li>- During a call: mute the microphone.</li> <li>- While the phone is ringing: mute the ringer for this call only.</li> <li>- In standby: access your answering system.</li> </ul>

# Reading the Displays

## On the base

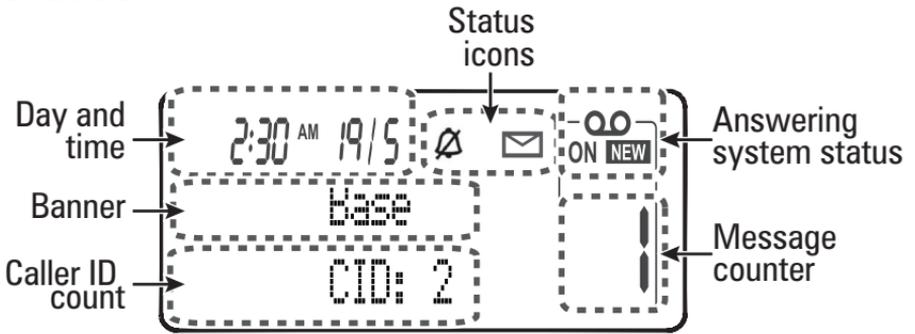

## On the handset

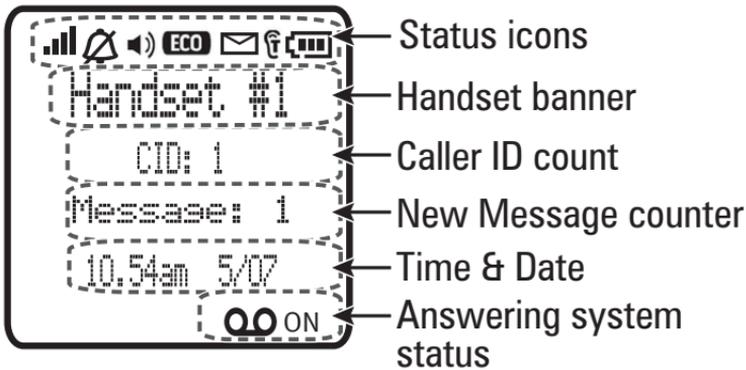


The table below shows the possible icons and what they mean. Since the icons appear based on what you're doing with the phone, you won't ever see all of these icons at the same time.

Icon	What it means
	(Handset only) Received signal strength indicator.
	The ringer is turned off: this handset will not ring when a call comes in.
	Answer Machine ON/OFF status
	You have a voice message waiting (only available if you subscribe to a voice mail service - see the section titled "Using Voice Message Notification" on page 32).
	Privacy Mode is on: no other handset can join your call.
	(Handset only) The speakerphone is on.
	The handset is using ECO (power save) mode. The ECO feature is automatically activated during talk or intercom modes. See "Automatic ECO (Power Save) Mode" on page 48).
	(Handset only) T-coil mode is on. (See "Do you use a T-coil hearing aid?" on page 44.)
	(Handset only) The battery levels; Level 3 (Full) Level 2 Level 1 Level 0 (Empty)

## USING THE MENUS

The menus are designed to be as easy as possible. Some users don't even need the manual once they know how to perform these actions:

To...	Press...
Open the menu	Press <b>MENU/SELECT</b> .
Highlighting menu options	On the handset: Use <b>UP</b> to highlighted option above & <b>DOWN</b> to highlight the option below.  On the base: The arrow cursor on the left side of the line shows which main menu item is currently highlighted. Use <b>UP</b> to move the cursor up & <b>DOWN</b> to move it down. Once a sub-menu is selected use <b>UP / DOWN</b> to scroll to the next menu item.
Select an option	Highlight the option, then press <b>MENU/SELECT</b> .
Go up one screen	Press <b>PHONEBOOK/LEFT</b> .
Close the menu	On the handset, press <b>END</b> ; on the base, press <b>PLAY/STOP</b> . (If you open the menu during a call, use <b>PHONEBOOK/LEFT</b> to back out of the menu without hanging up.)

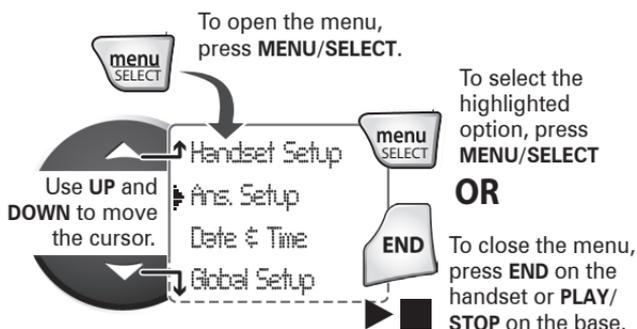

If you don't press any keys for thirty seconds, the phone times out and exits the menu. (When setting the date and time, the time-out period is extended to two minutes.)

## Using the Menus

### Base Setup (Base only)

Menu Option	What it does
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.

### Handset Setup (Handset only)

You can change these settings separately for each handset.

Menu Option	What it does
<i>T-coil</i>	Turn on T-coil mode to reduce noise on some hearing aids (see "Do you use a T-coil hearing aid?" on page 39).
<i>Ringer Tones</i>	Choose one of five melodies or four tones for the handset's main ring tone. As you highlight each ring tone, the phone plays a sample of the tone. When you hear the tone you want, press <b>MENU/SELECT</b> .
<i>Personal Ring</i>	Turn on the personal ring feature. If you have Caller ID, this feature lets you assign special ring tones to anyone in your phonebook: this handset will use the special ring tone when that person calls.
<i>Autotalk</i>	Turn on Auto Talk so you can answer the phone just by picking up the handset from the cradle (without having to press any buttons).
<i>Any Key Answer</i>	Turn on Any Key Answer so you can answer the phone by pressing a key on the twelve-key dial pad.
<i>Banner</i>	Change the name used on the handset's display.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.
<i>LCD Contrast</i>	Choose from ten LCD contrast levels.

## **Ans. Setup**

This menu controls the options and settings for your answering system (see "Ans. Setup menu options" on page 37).

## **Date & Time**

You need to set the date & time so messages get the right time stamp.

The date & time format is; day/month/year, hour/minutes/am/pm

- 1) Use the number keypad (**0-9**) or **UP/DOWN/LEFT/RIGHT** to enter the day of the month, month, year and then hour, minutes and AM or PM.
- 2) Press **MENU/SELECT** to confirm.

## **Global Setup**

The settings on this menu apply to all handsets and the base. Before changing these settings, make sure the phone is in standby and all handsets are within range of the base. (Only one handset at a time can change these settings.)

<b>Menu Option</b>	<b>What it does</b>
<i>Set Line Mode</i>	Do not change this setting unless instructed to by customer service.
<i>VMWI Reset</i>	Reset the Voice Message Waiting Indicator LED.
<i>Edit Voice Mail</i>	If you subscribe to a Voice Mail service you can set the Voice Mail number.
<i>Insert 0</i>	This feature adds "0" or "00" at the beginning of the number received from Caller ID. The default setting for New Zealand is ON. The default setting for Australia is OFF.

## **Call Blocking**

This menu lets you block unwanted calls from up to 20 phone numbers and manage your call block list (see page 31).

## **Register Accy.**

Register additional handsets to the base or re-register a handset that you had to reset for some reason (see "Resetting and Registering Handsets" on page 41).

## Entering Text on Your Phone

When you want to enter text into your phone (for example, a name in the phonebook), use the twelve-key dial pad to enter the letters printed on the number keys. Here's how it works:

- ◆ The phone enters the letters in the order they appear on the key. For example, if you press the number key **2** once, the phone enters the letter *A*. Press **2** twice for *B*, and three times for *C*.
- ◆ If you press the key again after the last letter, the phone starts the same letter sequence with small letters. If you press **2** four times in a row, the phone enters *a* (small letter). Press **2** five times for *b*, and six times for *c*.
- ◆ If you see the icon *[Aa]* in the display, the phone enters capital letters first (*A B C*), then small letters (*a b c*), then the number on the key (*2*). The icon *[aA]* means the phone starts at the small letters, so it enters small letters first, then the number on the key, then capital letters.
- ◆ The phone automatically uses a capital letter for the first letter and any letter right after a space; all other times, it uses small letters.
- ◆ If two letters in a row use the same number key, enter the first letter, then use **CALLER ID/RIGHT** to move the cursor to the next position to enter the second letter.

To	Follow these steps
Switch between capital & small letters	Press <b>*</b> .
Move the cursor	Press <b>PHONEBOOK/LEFT</b> to move the cursor to the left or <b>CALLER ID/RIGHT</b> to move the cursor to the right.
Leave a blank space	Press <b>#</b> .
Erase one letter	Move the cursor to the letter you want to erase and press <b>CLEAR (INTERCOM/CLEAR on the handset; MUTE/CLEAR on the base)</b> .
Erase the entire entry	Press & hold <b>CLEAR</b> .
Enter punctuation or a symbol	Press <b>0</b> to rotate through the available symbols.

## Using Your Phone

To...	From a handset	From a handset speakerphone	From the base speakerphone
make a call: Dial the number, then	Press <b>TALK /FLASH.</b>	Press <b>SPEAKER.</b>	Press <b>SPEAKER.</b>
answer a call	Press <b>TALK /FLASH.</b>	Press <b>SPEAKER.</b>	Press <b>SPEAKER.</b>
hang up	Press <b>END</b> or put the handset in the cradle.		Press <b>SPEAKER.</b>
switch between the speaker & earpiece	Press <b>SPEAKER.</b>	Press <b>SPEAKER.</b>	NA
mute the microphone during a call	Press <b>MESSAGES.</b> Press again to turn the microphone back on.		Press <b>MUTE/CLEAR.</b>
put a call on hold	Press <b>INTERCOM/CLEAR.</b>  If the call is on hold for 5 minutes, it will be disconnected.		Press <b>FIND HANDSET/ INTERCOM.</b>
return to a call on hold	Press <b>TALK /FLASH.</b>	Press <b>SPEAKER.</b>	Press <b>SPEAKER.</b>
mute the ringer for this call only	While the phone is ringing, press <b>MESSAGES.</b>		While the phone is ringing, press <b>MUTE/CLEAR.</b>

## Changing the Volume

You can set the volume of the ringer and speaker separately for the base and each handset; you can also set the earpiece volume on each handset. For each item, press **UP** to make it louder or **DOWN** to make it softer. The available volume levels and how to change them are listed below:

Change the	When	On the base	On a handset
ringer volume	the phone is in standby	choose one of 4 volume levels. Note: lowest level is ringer off - and the ringer off icon shows on the display. See also - Do Not Disturb (DND) on page 31.	
earpiece volume	you are on a normal call	NA	choose one of 6 volume levels
speaker volume	you use the speaker-phone for a call or getting messages	choose one of 10 volume levels	choose one of 6 volume levels

## Using the Redial List

The phone saves the last 5 numbers you dial on each station. To open the redial list, press **REDIAL/PAUSE**; use **UP** and **DOWN** to scroll through the list. To close the list, press **PHONEBOOK/LEFT**. With the phone in standby, open the list and find the number you want. Then:

To...	Press...
redial the selected number	On the handset, press <b>TALK /FLASH</b> or <b>SPEAKER</b> ; on the base, press <b>SPEAKER</b> .
delete the number	Press <b>MENU/SELECT</b> & select <i>Delete</i> .
save it to the phonebook	Press <b>MENU/SELECT</b> & select <i>Store Into PH BK</i> .
Delete all	Press <b>MENU/SELECT</b> & select <i>Delete All</i> .

## Using Caller ID and Call Waiting

You have to subscribe to **Caller ID**, **Call Waiting**, and **Caller ID on Call Waiting** services to use the features described in this section: **contact your telephone provider for more information.**

When a call comes in, the phone displays the caller's number and name (if available). The phone saves the information for the last 50 received calls to the *CID list*. When it's in standby, the phone displays how many calls came in since the last time you checked the CID list.

**All handsets share the same CID list so only one handset can access the list at a time.**

To...	Press...
Open the CID list	Press <b>CALLER ID/RIGHT</b> .
Scroll through the CID list	Press <b>DOWN</b> to scroll through the list from newest to oldest. Press <b>UP</b> to scroll from oldest to newest.
Close the CID list	Press <b>PHONEBOOK/LEFT</b> .

### ***Dialing from the Caller ID list***

- 1) Find the entry you want to dial.
  - 2) On the handset, press **TALK /FLASH** or **SPEAKER** to dial the number; on the base, press **SPEAKER**.
- (You can also press **TALK /FLASH** or **SPEAKER** before you open the CID list. Find the number you want to dial, then press **MENU/SELECT**.)

## Caller ID menu options

Open the CID list with the phone in standby. Find the number you want and press **MENU/SELECT**. Choose one of these CID menu options:

Menu Option	What it does
<i>Delete</i>	Erase this Caller ID number.
<i>Store Into PH BK</i>	Add this number to the phonebook. The phone prompts you to enter a name & edit the number; handsets also prompt you to choose a personal ring.
<i>Delete All</i>	Erase the CID list.
<i>Add Call Block</i>	Add the number to the call block list (see page 32). To add the number to the call block list from the base, press <b>BLOCK</b> instead of entering the menu.

## Using Call Waiting

If you get a Call Waiting call, the phone sounds a tone and displays any CID information received for the waiting call.

### For Australian Model:

Press **TALK /FLASH** on the handset (or **FLASH** on the base) and then press 2 to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK /FLASH** (**FLASH** on the base) and then 2 again.

### For New Zealand Model:

Press **TALK /FLASH** on the handset (or **FLASH** on the base) to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK /FLASH** (**FLASH** on the base) again.

**Note: You must subscribe to Call Waiting service for this feature to operate. Not all features are available in all areas.**

## Using the Phonebook

Each station can store up to 100 entries in its phonebook. All handsets share the same phonebook, so only one handset can access it at a time.

To...	Press...
Open/close the phonebook	Press <b>PHONEBOOK</b> .
Scroll through the entries	Press <b>DOWN</b> to scroll through the phonebook from A to Z or <b>UP</b> to scroll from Z to A.
Jump to entries that start with a certain letter	Press the number key corresponding to the letter you want to jump to.
Dial an entry	<ol style="list-style-type: none"><li>1. Find the entry you want to dial.</li><li>2. On the handset, press <b>TALK /FLASH</b> or <b>SPEAKER</b>; on the base, press <b>SPEAKER</b>.</li></ol>

### **Phonebook menu options**

Open the phonebook with the phone in standby, then press **MENU/SELECT** to open the phonebook menu. Choose one of these options:

Menu Option	What it does
<i>Create New</i>	Add an entry to your phonebook. The phone prompts you to enter the name & phone number. (Handsets will also prompt you to choose a personal ring.)
<i>Delete All</i>	Erase all the entries in this station's phonebook.

### **Phonebook entry options**

With the phone in standby, open the phonebook and find the entry you want. Press **MENU/SELECT** to open the individual phonebook entry menu. Choose one of these options:

Menu Option	What it does
<i>Edit</i>	Edit this entry. The phone prompts you to enter the name & phone number. (Handsets will also prompt you to choose a personal ring.)
<i>Delete</i>	Erase this entry.

## Chain Dialing

- ◆ If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.
- ◆ Enter the code number (up to 20 digits) into the phonebook just like a regular phonebook entry. Be sure to enter the code number into the phonebook exactly as you would enter it during a call.
- ◆ When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number. Press **MENU/SELECT** to transmit the code. Or, if you change your mind, use **PHONEBOOK/LEFT** to close the phonebook.

## Finding a Lost Handset

With the phone in standby, press **FIND HANDSET/INTERCOM** on the base. Select the handset you want to find (or *All* to page all handsets). The paged handset(s) beep for 1 minute or until you press **FIND HANDSET/INTERCOM** again or press **TALK /FLASH** followed by **END** on the handset.

## Using Special Features

### Using Do Not Disturb (DND)

You can silence the ringers on all handsets for a specific period of time.

- 1) With the phone in standby, press and hold **DND** on the base or **#/DND** on any handset. The phone prompts you to select the number of hours (1 - 9 or Always On) that you want it to stay in silent mode.
- 2) To confirm, press **DND** on the base or **#/DND** on the handset or just wait about 5 seconds. The DND backlight on the base turns on and the phone displays *Do Not Disturb* on the base and on each handset.
- 3) After the selected number of hours, the phone automatically exits DND mode. To exit DND mode manually, press and hold **DND** on the base or **#/DND** on the handset again.

### Using Call Block

If you subscribe to Caller ID, you can save phone numbers to the call block list. When a call comes in, the phone compares the received phone number to the numbers on the call block list. If the phone number is on the list, the phone replaces the caller's name with *Call Blocked* and disconnects the call. (The caller hears a reject guidance.)

The call block list holds 20 entries, and all stations share the same list. You can add entries through the *Call Blocking* menu, from the CID list, or by blocking incoming calls. (Only one station can edit the call block list at a time.)

#### ***Blocking incoming calls (Base only)***

When the phone rings, wait until the display shows the Caller ID information (usually after the second ring). If you want to block the call and add this number to the call block list, press **BLOCK** on the base. When the phone asks you to confirm, press **MENU/SELECT** or **BLOCK**.

**Blocking an incoming call from an "Unknown" or "Private" number is the same as selecting *Unknown Number* or *Private Number* from the *Call Blocking* menu.**

### ***Call Blocking menu options***

With the phone in standby, open the menu and select *Call Blocking*. Choose one of these options

<b>Menu Option</b>	<b>What it does</b>
<i>View Number</i>	See the numbers on your call block list.
<i>Create New</i>	Add an entry to your call block list. The phone will prompt you to enter a name & phone number.
<i>Private Number</i>	Block all calls from numbers reported by CID as "Private." (This does not count as one of the 20 entries.)
<i>Unknown Number</i>	Block all calls from numbers reported by CID as "Unknown". (This does not count as one of the 20 entries.)

### ***Call block entry options***

With the phone in standby, open the call block list and find the entry you want. Press **MENU/SELECT** to open the individual entry menu. Choose one of these options:

<i>Edit</i>	Edit this entry. The phone will prompt you to edit the name & phone number.
<i>Delete</i>	Erase this entry from the list & allow calls from this number.

## Using Voice Message Notification

This feature supports **Frequency-Shift Keying (FSK) message notification**. Contact your voice mail provider for more details.

If you subscribe to a voice mail service, your phone can notify you when you have a new message waiting. When you have new messages, the voice message icon (✉) appears in the display, and the new message light (at the top of the handset) blinks.



### **Setting Up Your Voice Mail**

When you sign up for a voice mail service, your service provider should give you an access number. If you don't have this information, contact your provider before you start.

- 1) With the phone in standby, open the menu.
- 2) Select **Global Setup**, then select **Edit Voice Mail**. For the New Zealand model the Telecom access number (083210) is preprogrammed.
- 3) Enter your access number exactly as you would dial it. You can enter a total of 20 digits. If you need the phone to wait for a few seconds between digits (to wait for the service to answer, for example), press **REDIAL/PAUSE** to insert a 2-second pause. If two seconds isn't long enough, you can insert as many pauses as you need, but each pause counts as one digit. Press **SELECT/MENU** when you're finished.

### **Getting Your Voice Mail Messages (Handset Only)**

Press **MESSAGES** (✉), select **Voice Mail** and press **SELECT/MENU** to dial the access number you programmed.

### **Resetting the voice message indicator**

If the voice message icon remains after you check your messages, you can reset it.

- 1) With the phone in standby, open the menu.
- 2) Select *Global Setup*, then select *VMWI Reset*.
- 3) Select **Yes**.

## Using Multi-Station Features

The expandable base and the cordless handset give you some useful multi-station features. (A station can be any handset or the base.)

### Expanding Your Phone


- ◆ Your base supports a maximum of 12 cordless handsets: the one that came with the base and up to 11 XDECT 8005 accessory handsets.
- ◆ Note: Expansion capacity is limited to six (6) handsets total if an XDECT 8015WP or XDECT 8005WP (waterproof) handset is registered. Your base also supports a total of 2 repeaters, including any that came with your phone. Visit the XDECT 8055 page on the website for compatible repeaters.
- ◆ Your base might be compatible with other Uniden accessory handsets: please visit our website for a list of compatible handsets.
- ◆ Accessory handsets/repeaters must be registered to the base before you can use them. Handsets that aren't registered display a *Handset not registered* message. For instructions on registering handsets/repeaters to this base, see pages 46 & 47 or the manual for the accessory.
- ◆ Any accessory handset(s)/repeater that came packaged with the base are already registered to that base for you.
- ◆ If a handset was previously registered to a base, you have to reset it so you can register it to a new base (see page 46 for XDECT 8005).

### Using Conference Calling

When an outside call comes in, the base and two handsets can join in a conference call with the outside caller. To join the call, just press

**SPEAKER** on the base or **TALK /FLASH** on a handset.

To leave the conference call, hang up normally; the other station remains connected to the call. (You can also use the handset speakerphone for a conference call, just like you can with a normal call.)

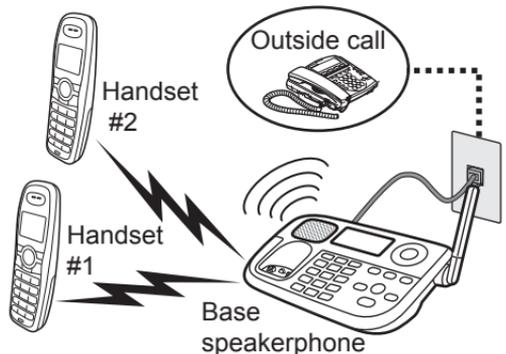

## Using Privacy Mode

You can prevent other stations from joining a call. Start your call as usual, then press **MENU/SELECT**: the display shows *Call Privacy*. Press **MENU/SELECT** again to turn privacy mode on (you'll see a **P** in the display). When you hang up, privacy mode turns off automatically. As long as you have privacy mode on, no other stations can interrupt your call. To allow another station to join the call, just turn privacy mode off by repeating the process above (press **MENU/SELECT** twice).

## Using Call Transfer

To...	From the base	From a handset
transfer a call	<ol style="list-style-type: none"><li>1. Press <b>FIND HANDSET/INTERCOM</b> to put the call on hold.</li><li>2. Select the station you want to transfer the call to, or select <i>All</i> to page all the stations at the same time. When the other station accepts the call, you'll be disconnected, but you can join the call again.</li></ol>	<ol style="list-style-type: none"><li>1. Press <b>INTERCOM/CLEAR</b> to put the call on hold.</li></ol>
cancel a transfer	Press <b>SPEAKER</b> to return to the call.	Press <b>TALK /FLASH</b> to return to the call.
accept a transferred call	<ol style="list-style-type: none"><li>1. To answer the page &amp; speak to the transferring station, press <b>FIND HANDSET/INTERCOM</b>.</li><li>2. To accept the call, press <b>SPEAKER</b>.</li></ol>	<ol style="list-style-type: none"><li>press <b>INTERCOM/CLEAR</b></li><li>press <b>TALK /FLASH</b>.</li></ol>

## Using the Intercom

Here are some things you need to know about using the intercom:

- ◆ Whenever the phone is in standby, you can make an intercom call between stations without using the phone line.
- ◆ You can make an intercom call from any station, but only two stations can be in an intercom call at any time.
- ◆ If an outside call comes in during an intercom call, the phone shows the CID information. If the other station hasn't answered the page, the phone cancels the page so you can answer the incoming call.

To...	From the base	From a handset
make an intercom page	1. Press <b>FIND HANDSET/ INTERCOM.</b> 2. Select the station you want to talk with, or select <i>A//</i> to page all the stations at the same time.	1. Press <b>INTERCOM/ CLEAR.</b>
cancel a page	Press <b>FIND HANDSET/ INTERCOM.</b>	Press <b>END.</b>
answer an intercom page	Press <b>FIND HANDSET/ INTERCOM</b> or <b>SPEAKER.</b>	Press <b>INTERCOM/CLEAR</b> or <b>TALK /FLASH.</b>
leave an intercom call	Press <b>FIND HANDSET/ INTERCOM.</b>	Press <b>END.</b>
answer an outside call during an incoming call	Press <b>SPEAKER.</b>	Press <b>TALK /FLASH</b>

## Using The Answering System

### Setting Up Your Answering System

You can set up your answering system from any handset or from the base.

To...	Follow these steps
Record your personal outgoing message or greeting	<ol style="list-style-type: none"><li>1. Open the menu with the phone in standby. Select <b>Ans. Setup</b>, then <b>Record Greeting</b>.</li><li>2. Press <b>MENU/SELECT</b> to start recording. Wait until the system says "Record greeting" before speaking.</li><li>3. Press <b>MENU/SELECT</b> to stop recording. The system plays back your new greeting.</li><li>4. To keep the greeting, press <b>END</b> on the handset or <b>PLAY/STOP</b> on the base. To delete it and try again, press <b>INTERCOM/CLEAR</b> on the handset or <b>DELETE</b> on the base.</li></ol>
Switch between the pre-recorded greeting & your own greeting	<ol style="list-style-type: none"><li>1. Open the menu with the phone in standby. Select <b>Ans. Setup</b>, then <b>Greeting Options</b>.</li><li>2. The system plays back the current greeting. Press <b>MENU/SELECT</b> to switch greetings.</li></ol>
Delete your greeting	<ol style="list-style-type: none"><li>1. Switch to your personal greeting following the steps above.</li><li>2. While the system is playing back your greeting, press <b>INTERCOM/CLEAR</b> on the handset or <b>DELETE</b> on the base.</li></ol>

### Ans. Setup menu options

You can change the answering system options from any handset or from the base. Just open the menu and select *Ans. Setup*.

Menu Option	What it does
<i>Security Code</i>	Enter a 2-digit PIN so you can access your answering system from any touch-tone phone (see page 41).
<i>Ring Time</i>	Set the number of rings (6, 9 or 12) before the answering system answers the phone. Choose <i>Toll Saver (TS)</i> to have the system pick up after 2 rings if you have new messages or after 4 rings if you don't.

<i>Record Time</i>	Set the amount of time callers have to leave a message, either <i>1</i> minute or <i>4</i> minutes. Choose <i>Announce Only</i> if you don't want the system to let callers to leave a message.
<i>Message Alert</i>	Have the system beep every 15 seconds when you have a new message; the beeping stops when you listen to all your new messages. (To mute the alert without listening to your messages, press any key on the base.)
<i>Call Screen</i>	Turn on the call screen feature so you can hear callers as they leave messages on the base speaker (see page 40).
<i>Ans. On/off</i>	Turn your answering system on or off. (To turn your system on or off from the base, just press <b>ON/OFF</b> .)
<i>Record Greeting</i>	Record an outgoing message or greeting (see page 37).
<i>Greeting Options</i>	Switch greetings or delete your greeting (see page 37).

## Getting Your Messages

### *Accessing your answering system from a handset*

You can access your system from a handset whenever the phone is in standby.

Press **MESSAGES/MUTE** to start remote operation mode.



- ◆ During remote operation, the phone beeps to let you know it's waiting for your next command.
- ◆ If you don't press any keys for 30 seconds, the phone returns to standby.
- ◆ Only one handset can access the system at a time.

## How to operate your answering system

To...	From the base	From a handset (remote operation)
play new messages	Press <b>PLAY/STOP</b> .  The system announces the number of new & old messages, then plays the first new message followed by the day & time it was received. Then the system plays the new messages in the order they were received.	Press <b>MESSAGES/MUTE</b> .
restart the current message	Press <b>PHONEBOOK/LEFT</b> .	Press <b>1</b> or select <i>1:Repeat</i> .
replay previous messages	Press <b>PHONEBOOK/LEFT</b> repeatedly until you hear the message you want to replay.	Press <b>1</b> or select <i>1:Repeat</i> repeatedly until you hear the message you want to replay.
skip a message	Press <b>CALLER ID/RIGHT</b> .	Press <b>3</b> or select <i>3:Skip</i> .
delete a message	While the message is playing, press <b>DELETE</b> .	While the message is playing, press <b>4</b> or select <i>4&gt;Delete</i> .
delete all of your messages	With the phone in standby, press <b>DELETE</b> . When the system asks you to confirm, press <b>DELETE</b> again.	Not available.
play old messages	After the system plays the new messages, press <b>PLAY/STOP</b> again.	press <b>2</b> or select <i>2:Play</i> .
end the operation	Press <b>PLAY/STOP</b> .	Press <b>END</b> .

## Screening Your Calls

Another feature your answering system gives you is *call screening*. While the system is taking a message, you can hear the caller on the base speaker (if you turn on *Call Screen*) or from a handset.

To...	From the base	From a handset
hear the caller leaving a message	Just listen to the caller over the speaker.	Press <b>MESSAGES/MUTE</b> .
answer the call	Press <b>SPEAKER</b> .	Press <b>TALK /FLASH</b> .
mute the call screen without answering	Press <b>MUTE/CLEAR</b> .	Press <b>END</b> or return the handset to the cradle.

- ◆ If you mute the call screen, the system continues taking the message: it just stops playing through the speaker.
- ◆ Only one handset at a time can screen calls. If another handset is screening the call, the handset beeps and returns to standby.

## Using the System While You're Away from Home

You can also operate your answering system from any touch-tone phone. Before you can use this feature, you have to program a security code.

### ***Programming a security code***

- 1) With the phone in standby, open the menu from any handset.
- 2) Select *Ans. Setup*, then select *Security Code*.
- 3) Use the number keypad to enter a two-digit security code (00 to 99). Press **MENU/SELECT** when you're finished.

**Remember to make a note of your new security code!**

### ***Dialing in to your system***

- 1) Call your telephone number and wait for the system to answer. (If your answering system is off, it will answer after about fifteen rings and sound a series of beeps instead of your greeting.)
- 2) During the greeting (or beeps), press **#** and **immediately** enter your security code. (You have 3 tries to enter you security code: if you enter it wrong 3 times, the system hangs up and returns to standby.)
- 3) The system announces the current time, the number of messages stored in memory, and a help prompt. Then it starts beeping intermittently to let you know it's waiting for your command.
- 4) When you hear the intermittent beeping, enter a command from the chart to the right.

**If you don't press any keys for 15 seconds, the phone will hang up and return to standby.**

#-1	Repeat message
#-2	Play message
#-3	Skip message
#-4	Delete message
#-5	Stop playback
#-6	Turn the system on
#-9	Turn the system off
#-0	Hear help prompts

## Solving Problems

If you have any trouble with your phone, try these simple steps first. If you still have a question, visit the website listed on the front cover.

If...	Try...
No stations can make or receive calls.	<ul style="list-style-type: none"><li>- Checking the telephone cord connection.</li><li>- Disconnecting the base AC adapter. Wait a few minutes, then reconnect it.</li></ul>
One handset can't make or receive calls.	<ul style="list-style-type: none"><li>- Moving the handset closer to the base.</li><li>- Resetting the handset.</li></ul>
A station can make calls, but it won't ring.	<ul style="list-style-type: none"><li>- Making sure the ringer is turned on.</li><li>- Making sure Do Not Disturb is turned off.</li></ul>
A handset's display won't turn on.	<ul style="list-style-type: none"><li>- Charging the battery for 15-20 hours.</li><li>- Checking the battery pack connection.</li></ul>
A handset is not working.	<ul style="list-style-type: none"><li>- Charging the battery for 15-20 hours.</li><li>- Checking the battery pack connection.</li><li>- Resetting the handset.</li></ul>
A handset says <i>Unavailable</i> .	<ul style="list-style-type: none"><li>- Moving the handset closer to the base.</li><li>- Seeing if another station has Privacy Mode on.</li><li>- Making sure the base is plugged in.</li></ul>
No stations will display any Caller ID information.	<ul style="list-style-type: none"><li>- Letting calls ring at least twice before answering.</li><li>- Seeing if the call was placed through a switchboard.</li><li>- Checking with your telephone service provider to make sure your Caller ID service is active.</li></ul>
Caller ID displays briefly & then clears.	<ul style="list-style-type: none"><li>- You may have to change the line mode. Visit the website for more information.</li></ul>
I can't transfer calls.	<ul style="list-style-type: none"><li>- Resetting all the handsets.</li></ul>
I can't get two handsets to talk to the caller.	<ul style="list-style-type: none"><li>- Making sure both handsets are registered to this base.</li><li>- Making sure no station is in Privacy Mode.</li></ul>

If...	Try...
The phone keeps ringing if I answer on an extension.	- You may have to change the line mode. Visit the website for more information.
The answering system does not work.	- Making sure the answering system is turned on. - Making sure the base AC adapter is plugged into a continuous wall outlet (i.e., not controlled by a wall switch).
The answering system won't record messages.	- Making sure the <i>Record Time</i> is not set to <i>Announce Only</i> . - Deleting messages (the memory may be full).
A handset can't access the answering system.	- Making sure no other handset is using the system. - Making sure the phone is in standby.
My outgoing message is gone.	- Seeing if there was a power failure. You may have to re-record your personal outgoing message.
I can't hear the base speaker.	- Making sure call screening is turned on. - Changing the base speaker volume.
Messages are incomplete.	- The incoming messages may be too long. Remind callers to leave a brief message. - Deleting messages (the memory may be full).
The system keeps recording if I answer on an extension.	- You may have to change the line mode. Visit the website for more information.
I can't register a handset.	- Seeing if you already have 12 (XDECT 8005) handsets registered to this base. - Resetting the handset.

## Weak or Hard To Hear Audio

If a caller's voice sounds weak or soft, the signal might be blocked by large metal objects or walls; you might also be too far from the base, or the handset's battery may be weak.

- ◆ Try moving around while you're on a call or moving closer to the base to see if the sound gets louder.
- ◆ Make sure the handset's battery is fully charged.
- ◆ Try adjusting the earpiece volume or the audio tone (see below).

## Noise or Static On The Line

Interference is the most common cause of noise or static on a cordless phone. Here are some common sources of interference:

- ◆ electrical appliances, especially microwave ovens
- ◆ computer equipment, especially wireless LAN equipment and DSL modems
- ◆ radio-based wireless devices, such as room monitors, wireless controllers, or wireless headphones or speakers
- ◆ large florescent light fixtures (especially if they give off a buzzing noise)
- ◆ other services that use your phone line, like alarm systems, intercom systems, or broadband Internet service

### Do you use a T-Coil hearing aid?

If you have a hearing aid equipped with a telecoil (T-coil) feature, the interaction between the hearing aid & digital cordless phones can cause noise in the handset. If you have a T-coil hearing aid & you have problems with noise on the line, try turning on *T-coil* mode. Open the menu. Select *Handset Setup*, then select *T-coil*.

**Using T-coil mode can shorten the handset's talk time; make sure to watch the battery status and keep the battery charged.**


## Here are some hints for when the static is...

on 1 handset or in 1 location:	on all handsets or in all locations:
<ul style="list-style-type: none"><li>- Check nearby for one of the common interference sources.</li><li>- Try moving the handset away from a suspected source, or try moving the suspected source so it's not between the handset &amp; the base.</li><li>- Try moving closer to the base. There is always more noise at the edges of the base's range. If the handset displays an <i>Out of Range</i> message, you need to move closer to the base.</li></ul>	<ul style="list-style-type: none"><li>- Check near the base for the source of interference.</li><li>- Try moving the base away from a suspected source, or turn off the source if possible.</li><li>- If the base has an adjustable antenna, try raising the antenna so it stands straight up.</li><li>- If you have any service that uses the phone line, you might need a filter (see below).</li></ul>

### Installing a line filter or DSL filter

Sometimes, broadband Internet services that use the telephone line can interfere with phones. One of these services-DSL-often causes static on telephones. A DSL filter or telephone line filter usually solves this problem. The technician who installed your DSL service might have left some filters for you; if not, call your DSL provider or look in any electronics store.

Plug the DSL filter into the telephone wall jack and plug your phone's base into the filter. Make a test call to make sure the noise is gone.

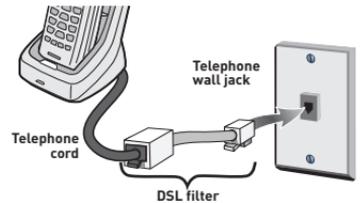

## Resetting and Registering Handsets

If you are having trouble with a handset or if you want to replace one, you need to clear the registration information from the base and the handset:

Do you have the base the handset is registered to?	
Yes	No
<ol style="list-style-type: none"><li>1. Press &amp; hold <b>END</b> and <b>#</b> until the <i>System Reset</i> menu appears (about 5 seconds).</li><li>2. Select <i>Deregister HS</i>. The display lists all registered handsets.</li><li>3. Select the handset you want to reset.</li><li>4. When the phone asks you to confirm, select <i>Yes</i>. The handset clears its information from the base &amp; deletes its own link to the base.</li></ol>	<ol style="list-style-type: none"><li>1. Press &amp; hold <b>END</b> and <b>#</b> until the <i>System Reset</i> menu appears (about 5 seconds).</li><li>2. Select <i>Base Unavailable</i>.</li><li>3. When the phone asks you to confirm, select <i>Yes</i>. The handset deletes its own link without contacting the base.</li></ol>

When you reset a handset (or if you buy a new one), that handset displays a *Handset Not Registered* message. If you see this message on a handset, you need to register it to a base before you can use it.

### Registering a handset

Does the handset fit in the base cradle?	
Yes	No
Place the handset in the base. The display should say <i>Handset Registering</i> .	<ol style="list-style-type: none"><li>1. On the base, open the menu and select <i>Register Accy</i>. The display should say <i>Handset Registering</i>.</li><li>2. On the handset you want to register, press and hold <b>#</b> until the handset display says <i>Handset Registering</i> (about 2 seconds).</li></ol>

In about 30 seconds, the handset display should say *Registration Complete*. Press **TALK /FLASH** and make sure you get a dial tone.

If...	Try...
- you don't hear a dial tone - the display says <i>Registration Failed</i>	Making sure the handset is fully charged, then start over at step 1.

**To register a handset to a different base, see the section "Expanding Your Phone" in the user's guide for the other base.**

## Registering Repeaters to the Base

If you are having trouble with a repeater or if you want to replace one, you need to register the repeater to the base.

**Connect the repeater close to the base for easy access to the necessary buttons and indicators. Locate the repeater in the desired position after registration is complete.**

- 1) On the base, open the menu and select *Register Accy*.
- 2) On the back of the repeater you want to register, press and hold the registration button until the **LINK** light on the front starts to blink (about 2 seconds).
- 3) Release the button and wait for the **LINK** light to turn on and steady (this can take about 90 seconds). The repeater has been registered to the base.

If...	Try...
the <b>LINK</b> light won't turn on	- checking the repeater's AC adapter - connecting the adapter to a different outlet.
the <b>LINK</b> light continues flashing	- disconnecting the unit's AC adapter. Wait about ten seconds, then try again. - making sure there are not already 6 repeaters registered to this base. - making sure no other base or repeater is in registration mode.

- ◆ Only register one repeater at a time. If more than one repeater is in registration mode at the same time then they can interfere with each other.
- ◆ Only register a repeater to one base at a time. If more than one base is in registration mode at the same time then you can't control which base the repeater registers to.
- ◆ If you want to register two repeaters to this base, just repeat these steps with the second repeater.

## Handling Liquid Damage

Moisture and liquid can damage your cordless phone.

- ◆ If the handset or base is exposed to moisture or liquid, but only the exterior plastic housing is affected, wipe off the liquid, and use as normal.
- ◆ If moisture or liquid has entered the plastic housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base), follow these steps:

Handset	Base
<ol style="list-style-type: none"><li>1. Remove the battery cover &amp; disconnect the battery.</li><li>2. Let dry for at least 3 days with the battery disconnected and the cover off for ventilation.</li><li>3. After the handset dries, reconnect the battery pack and replace the cover. Recharge the battery fully (15-20 hours) before using.</li></ol>	<ol style="list-style-type: none"><li>1. Disconnect the AC adapter to cut off the power.</li><li>2. Disconnect the telephone cord.</li><li>3. Let dry for at least 3 days before reconnecting.</li></ol>

**IMPORTANT: You must unplug the telephone line while recharging the battery pack to avoid charge interruption.**

---

***CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.***

---

## Automatic ECO (Power Save) Mode

### ***Handset***

ECO mode activates automatically during Talk or Intercom modes, if the received signal is good, to reduce power consumption. ECO shows on the display when **ECO** mode is active. If the received signal becomes poor, ECO mode will be released and **ECO** will be turned off.

### ***Base***

If the base has only one handset registered (i.e. no accessory handsets) then the base will reduce its transmission power when the handset is on the base.

# Important Information

## Terms Used In This Guide

<b>Accessory handset</b>	An extra handset that can register to and be used with an expandable phone base. All accessory handsets must be registered to a base before you can use them.
<b>Base</b>	The main part of the phone. It connects to your phone line and lets you make and receive calls. Most bases also have a cradle to store a handset.
<b>Call Waiting</b>	A service that lets you receive calls while you are on another call.
<b>Caller ID</b>	(Also called CID.) A service that shows the name and number of incoming callers.
<b>Charger</b>	A cradle that stores and charges a handset but doesn't connect to the phone line.
<b>Cradle</b>	The part of the phone that stores a handset. While in a cradle, a handset is always in standby, and any keys are locked.
<b>During a call</b>	The station is currently on a call or has activated a dial tone.
<b>Handset</b>	A cordless handset that you use to dial the phone and talk to callers.
<b>In standby</b>	The phone is inactive: there is no dial tone, no station is on a call or listening to messages.
<b>Station</b>	Any handset or the base.

## Specifications

		<b>Base</b>	<b>Charger</b>
<b>AC adapter</b>	Part number	AAD-041S(M)	AAD-600S(M)
	Input voltage	240V AC, 50Hz	240V AC, 50Hz
	Output voltage	9V DC@ 350mA	9V DC@ 210mA
<b>Battery pack</b>	Part number	BT-694 or BT-694s	
	Capacity	650mAh (BT-694) or 500mAh(BT-694s)	

- ◆ Use only the supplied AC adapters.
- ◆ Be sure to use the proper adapter for the base & any chargers.
- ◆ Do not place the power cord where it creates a trip hazard or where it could become chafed & create a fire or electrical hazard.
- ◆ Do not place the base in direct sunlight or subject it to high temperatures.

## Battery Information

- ◆ Fully charged, the battery should provide about 10 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- ◆ Keep an eye on the battery status icon. When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- ◆ With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, visit the website listed on the front cover.

### ***Rechargeable Nickel-Metal-Hydride Battery Warning***

---

***CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.***

---

- ◆ This equipment contains a rechargeable Nickel-Metal-Hydride battery.
- ◆ The rechargeable batteries contained in this equipment may explode if disposed of in a fire.
- ◆ Do not short-circuit the battery.
- ◆ Do not charge the rechargeable battery pack used in this equipment with in any charger other than the one designed to charge this battery pack as specified in the owner's manual. Using another charger may damage the battery pack or cause the battery pack to explode.

**Uniden works to reduce lead content in PVC coated cords in our products & accessories.**

# INDEX

## A

Answer Machine	
Call Screen .....	38
Get Messages .....	38
Greeting (Outgoing Message) .....	37
Record / Change / Delete .....	37
On/Off .....	37
Ring time / Record Time .....	37
Record Time .....	38
Remote Operation	
from Handset .....	39
away from Home.....	40
Security Code .....	37, 41
Any Key Answer .....	22
AutoTalk .....	22

## B

Banner .....	22
Battery	
Preparing and charging .....	5, 6
Replacement and handling.....	50
Belt Clip .....	7

## C

Caller ID	
Caller ID service .....	27
Calling .....	27
Call Waiting .....	28
Deleting .....	28
Storing .....	28
Using .....	27
Viewing .....	27
Call transfer feature .....	35
Chain dialing .....	30
Clock (see Date & Time)	
Conference Calling .....	34

## D

Date & Time .....	19, 23
Deregister the handset .....	46
Distinctive ringer (see Personal Ring)	
Do Not Disturb	
(DND) .....	16, 18, 31

## E, F, G

Earpiece volume.....	26
ECO mode .....	48
Expanding your phone .....	34
Find handset.....	30

## H

Hands-free conversation .....	25
Headset installation .....	7

## I, J, K, L

Intercom .....	16, 18, 36
Insert Zero .....	23
Keypad Lock .....	18
Key Touch Tone .....	22
LCD contrast .....	22
Line Filter .....	45
Liquid Damage .....	48

## M, N, O

Making a call .....	25
Mute .....	10, 11, 18, 25
Noise 44	

## P, Q

Package contents.....	3
Paging handset (see Find handset)	
Personal Ring.....	22

# INDEX (Cont'd)

Phonebook .....	29
Editing.....	24, 29
Erasing .....	29
Making calls .....	29
Storing .....	29
Viewing .....	29
Chain dialing.....	30
Privacy mode .....	35

## R

Receiving a call .....	25
Redialing a call .....	26
Register the handset .....	46
Registering Repeater(s) to the Base .....	47
Repeater Setup .....	11-14
Resetting the handset .....	46
Ringer	
Ringer melodies & tones .....	22
Ringer volume .....	26

## S

Setting up base unit .....	5-9
extra handset .....	5, 6
handset .....	5, 6
Static (see Noise)	

## T, U, V

Transferring a call .....	35
Troubleshooting .....	42
Voice Mail .....	32
Programming .....	23

## W, X, Y, Z

Wall Mounting the Base .....	8
Warranty .....	55

# NOTES

# One Year Limited Warranty

**UNIDEN XDECT 8055, XDECT 8055+1, XDECT 8055+2 or XDECT 8055+3**

**IMPORTANT Satisfactory evidence of the original purchase is required for warranty service**

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

## **Warrantor**

The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

## **Terms of Warranty**

Uniden Aust/NZ warrants to the original retail purchaser only that XDECT 8055, XDECT 8055+1, XDECT 8055+2 or XDECT 8055+3 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

## **Warranty Period**

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

## **Parts Covered**

This warranty covers the Product and included accessories.

## **User-generated Data**

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

## **Statement of Remedy**

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

## **Procedure for Obtaining Warranty Service**

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

### **UNIDEN AUSTRALIA PTY LTD**

Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Phone number: 1300 366 895  
Email address:  
custservice@uniden.com.au

### **UNIDEN NEW ZEALAND LTD**

Service Division  
150 Harris Road, East Tamaki  
Auckland 2013  
Phone number: (09) 273 8377  
Email address:  
service@uniden.co.nz

**Uniden®**

© 2011 Uniden Australia Pty Ltd/Uniden New Zealand Limited  
Printed in Vietnam U01UN346BZB(0)

# Uniden®

## XDECT 8005 Series

---

*For more exciting new products please visit our website:*

*Australia: [www.uniden.com.au](http://www.uniden.com.au)*

*New Zealand: [www.uniden.co.nz](http://www.uniden.co.nz)*

---

# OWNER'S MANUAL

# Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

---

## **SAVE THESE INSTRUCTIONS!**

---

### ***Important Notice:***

- Under power failure conditions this appliance may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

### **General Notices for New Zealand Model:**

- The grant of a NZ Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- The maximum volume setting of this telephone exceeds the Telecom specified volume requirement. Telecom takes no responsibility for the high volume available on this telephone, customer's who believe this telephone is too loud should contact the manufacturer at the website indicated on owner's manual warranty page.
- For telephone networks other than Telecom there may be a charge incurred for local calls if the Insert 0 feature is on. Turn Insert 0 off.
- This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

# XDECT 8005 Series

## What's in the box?



XDECT 8005  
accessory handset  
& charger



Charger  
AC adaptor  
AAD-600S(M)



Battery  
cover



Belt clip




Rechargeable  
battery pack  
(BT-694 or  
BT-694s)

- If any items are missing or damaged, contact your place of purchase immediately. **Never use damaged products!**
- Need Help? Get answers at our website:  
**[www.uniden.com.au](http://www.uniden.com.au)** for Australian model  
**[www.uniden.co.nz](http://www.uniden.co.nz)** for New Zealand model.


# Installing Your Phone

## Charge the Battery

- 1) Unpack the handset, battery packs, and battery cover. If any battery cover is already on the handset, press in on the notch and slide the cover down and off.

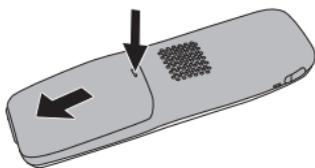


- 2) Line up the red and black wires on the battery pack with the label inside the handset.

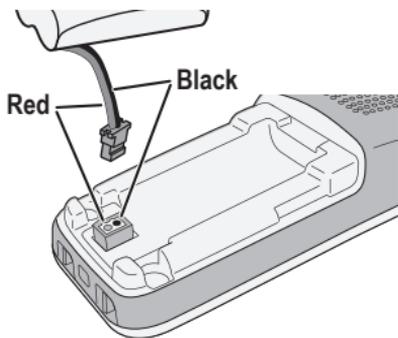


- 3) Push the connector in until it clicks into place; tug gently on the wires to make sure the battery pack is securely connected.

- 4) Place the cover over the battery compartment and slide it up into place.

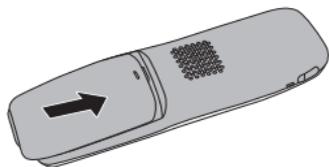

- 5) Connect the AC adaptor to the charger's **DC IN 9V** jack and set the plug into the notch as shown.

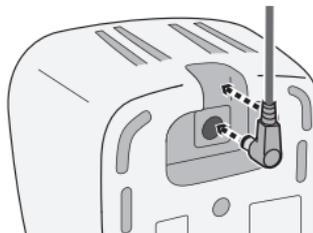

- 6) Plug the other end of the adaptor into a standard 240V AC power outlet.

- 7) Place the handset in the charger with the display facing forward. The CHARGE light on the handset should turn on.

If...	Try...
the CHARGE light does not turn on	<ul style="list-style-type: none"><li>- reseating the handset.</li><li>- checking the AC adaptor connection.</li><li>- seeing if the outlet is controlled by a wall switch.</li></ul>

**Charge the handset completely (about 15 hours) before using it.**



## Installing the Beltclip

Line up the holes on each side of the handset.

**To attach the belt clip;** Insert into the holes on each side of the handset. Press down until it clicks.

**To remove the belt clip;** Pull either side of the belt clip to release the tabs from the holes.

## Headset Installation

Your handset may be used with the Uniden HS915 headset. To use this feature, insert the headset plug into the headset jack. Your handset is ready for hands-free conversations. Headsets can be purchased online, see the website details on the front cover.

# Registering to a Base

The accessory handset won't work until you register it to a base!

## Compatible Bases

This handset is designed for use with Uniden's XDECT 8015 and XDECT 8055 bases. Other Uniden XDECT bases may be compatible with this handset. For the most up-to-date list of which bases this handset is compatible with, see our website.

## Registration Methods

There are three different registration methods, but it's easy to figure out which one applies to your handset and base. Answer the two questions to register the handset to one of the compatible bases.

## Does the handset fit in the base cradle?

Yes	Place the handset in the base. The display should say <b>Registering</b> .
No	Does the base have an LCD display?
Yes	<ol style="list-style-type: none"><li>1. On the base, open the menu and select <b>Register Accy</b>. The display should say <b>Registering</b>.</li><li>2. On the handset, press and hold <b>HASH(#)</b> until the display says <b>Registering</b> (about 2 seconds).</li></ol>
No	<ol style="list-style-type: none"><li>1. Disconnect the base AC adaptor.</li><li>2. On the base, press and hold <b>FIND</b> while you reconnect the adaptor.</li><li>3. On the handset, press and hold <b>HASH(#)</b> until the display says <b>Registering</b> (about 2 seconds).</li></ol>

After about 30 seconds, the handset display should say **Registration complete**.

## Test the connection

Pick up the handset and press **TALK/FLASH**. Make sure you get a dial tone. (Press **END** to hang up.)

If...	Try...
- you don't hear a dial tone - the display says <b>Registration failed</b>	Making sure the handset is fully charged, then trying again.

## Resetting the Handset

If you are having trouble with a handset or if you want to replace one, you need to clear the registration information from the base and the handset:

Do you have the base the handset is registered to?	
Yes	No
<ol style="list-style-type: none"><li>1. Press &amp; hold <b>END</b> and <b>#</b> until the <b>System Reset</b> menu appears (about 5 seconds).</li><li>2. Select <b>Deregister HS</b>. The display lists all registered handsets.</li><li>3. Select the handset you want to reset.</li><li>4. When the phone asks you to confirm, select <b>Yes</b>. The handset clears its information from the base &amp; deletes its own link to the base.</li></ol>	<ol style="list-style-type: none"><li>1. Press &amp; hold <b>END</b> and <b>#</b> until the <b>System Reset</b> menu appears (about 5 seconds).</li><li>2. Select <b>Base Unavailable</b>.</li><li>3. When the phone asks you to confirm, select <b>Yes</b>. The handset deletes its own link without contacting the base.</li></ol>

When you reset a handset (or if you buy a new one), that handset displays a **Handset Not Registered** message. If you see this message on a handset, you need to register it to a base before you can use it.

# Important Information

- Because the handset adapts to the base, the exact features and operation of the handset will vary slightly depending on which base you register the handset to. Refer to the owner's manual for the base you're registering the handset to for feature descriptions.
- All features and operation for the handset are described in the owner's manual for one of the bases listed under the **Compatible Bases** section.
- Owner's manuals for all Uniden phones are available on our website for free downloading.

## Specifications

AC Adaptor	Part number	Input Voltage	Output Voltage
	AAD-600S(M)	240V AC, 50 Hz	9V DC@ 210mA
Battery pack	Part number	Capacity	
	BT-694 or BT-694s	650mAh (BT-694) or 500mAh (BT-694s)	

- Use only the supplied AC adaptors.
- Be sure to use the proper adaptor for the base and any chargers.
- Do not place the power cord where it creates a trip hazard or where it could become chafed & create a fire or electrical hazard.
- Do not place the unit in direct sunlight or subject it to high temperatures.

## **Battery Information**

- Fully charged, the battery should provide about 10 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- Keep an eye on the battery status icon. When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, visit the website.

## **Rechargeable Nickel-Metal-Hydrate Battery Warning**

---

**CAUTION!** Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.

---

- This equipment contains a rechargeable Nickel-Metal-Hydrate (Ni-MH) battery.
- Do not short-circuit the battery.
- The rechargeable battery contained in this equipment may explode if disposed in a fire.
- Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.

Rechargeable batteries must be recycled or disposed of properly. Uniden works to reduce lead content in PVC coated cords in our products & accessories.

# One Year Limited Warranty

## UNIDEN XDECT 8005

**IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service**

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

### Warrantor

The warrantor is either;  
Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or  
Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

### Terms of Warranty

Uniden Aust/NZ warrants to the original retail purchaser only that the XDECT 8005 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

### Warranty Period

This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

### Parts Covered

This warranty covers the Product and included accessories.

## **User-generated Data**

This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

## **Statement of Remedy**

If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

## **Procedure for Obtaining Warranty Service**

Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

### **UNIDEN AUSTRALIA PTY LTD**

Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Phone number: 1300 366 895  
Email address:  
[custservice@uniden.com.au](mailto:custservice@uniden.com.au)

### **UNIDEN NEW ZEALAND LTD**

Service Division  
150 Harris Road, East Tamaki  
Auckland 2013  
Phone number: (09) 273 8377  
Email address:  
[service@uniden.co.nz](mailto:service@uniden.co.nz)

**Uniden®**

© 2011 Uniden Australia Pty/Uniden New Zealand Limited  
Printed in Vietnam U01UU256BZZ(0)